


Mounting Options

The standard LM6 mounting foot allows for the power cable to exit through a pre-drilled hole in the mounting surface. Each LM6 is also supplied with a spacer which, when installed, allows for a side cable exit which is desirable in some cases.

Installation Without Spacer

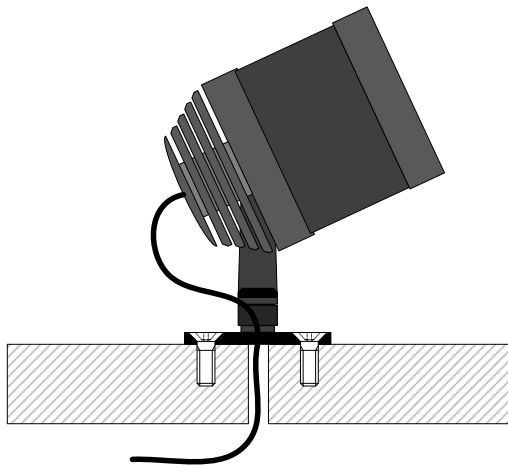

Using M5 threaded countersunk screws, fix the fitting to the mounting surface, with the cable exiting through a pre-drilled hole in the surface.

Installation With Spacer

